MECHANICAL SEAL -GLAND BODY REMOVAL INSTALLATION GUIDE

1 Gland Removal Tool

Qty 1

2 Mechanical Nut Spanner


Qty 1

Page 1 of 10

MECHANICAL SEAL -GLAND BODY REMOVAL INSTALLATION GUIDE



MECHANICAL SEAL -GLAND BODY REMOVAL INSTALLATION GUIDE

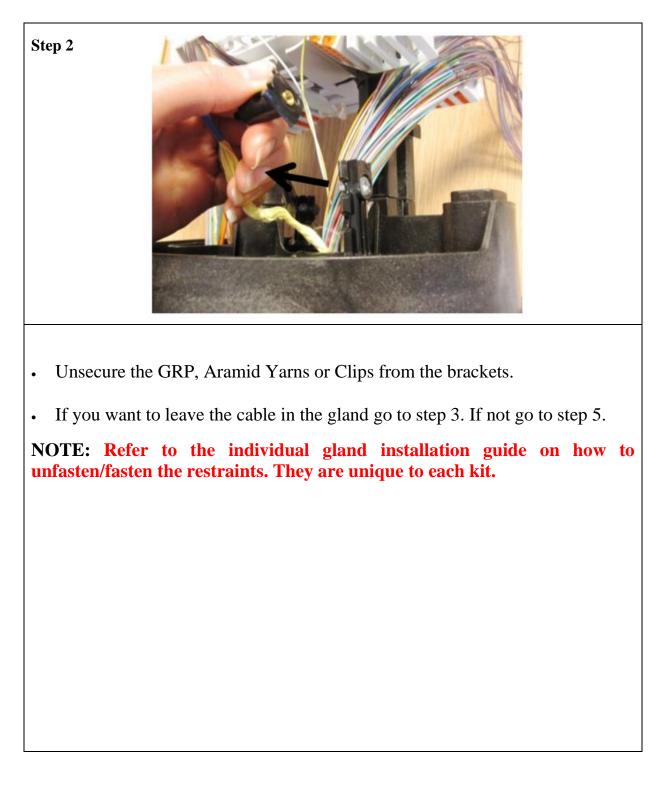

Page 3 of 10

MECHANICAL SEAL -GLAND BODY REMOVAL INSTALLATION GUIDE



• Snap the 2 halves of the gland removal tool around the tubes.

Page 4 of 10

Step 3

MECHANICAL SEAL -GLAND BODY REMOVAL INSTALLATION GUIDE




• Slide the tool over the gland and push into the base. When clips disengage remove gland from base and carefully pull out all tubes and fibres.


Page 5 of 10

Step 4

MECHANICAL SEAL -GLAND BODY REMOVAL INSTALLATION GUIDE

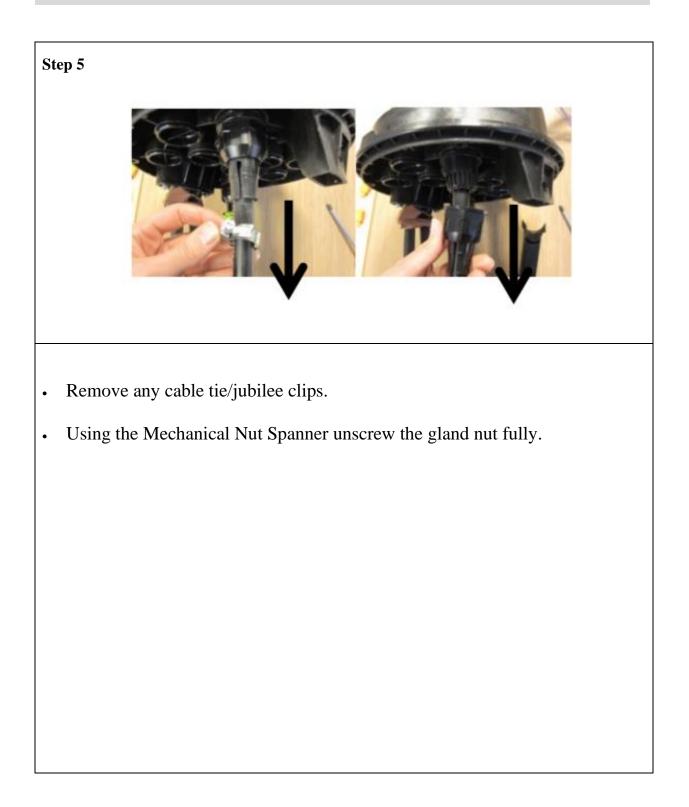

MECHANICAL SEAL -GLAND BODY REMOVAL INSTALLATION GUIDE

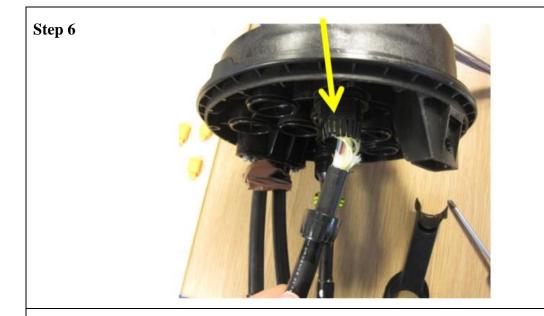

- Remove any GRP, Aramid Yarn or Clip brackets.
- Pull gently on the cable sheath to slide the cable in a downwards motion ensuring the cable seal is removed as well.
- If using again, put your cable assembly, and removed gland parts to one side.
- If not, discard all removed parts.


MECHANICAL SEAL -GLAND BODY REMOVAL INSTALLATION GUIDE



• Clip the 2 parts of the gland removal tool together by pushing the tabs into the other half.


Page 8 of 10

MECHANICAL SEAL -GLAND BODY REMOVAL INSTALLATION GUIDE

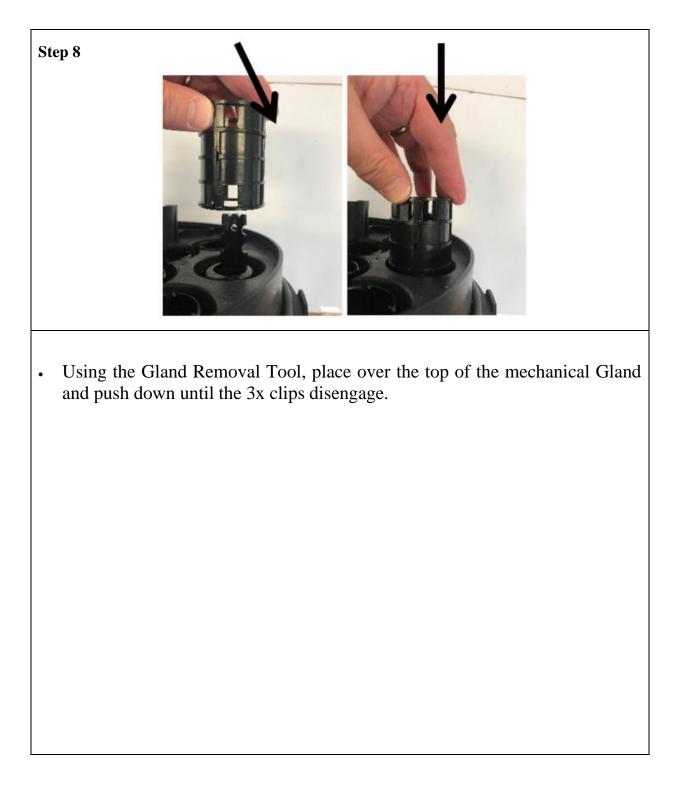

Page 9 of 10

MECHANICAL SEAL -GLAND BODY REMOVAL INSTALLATION GUIDE

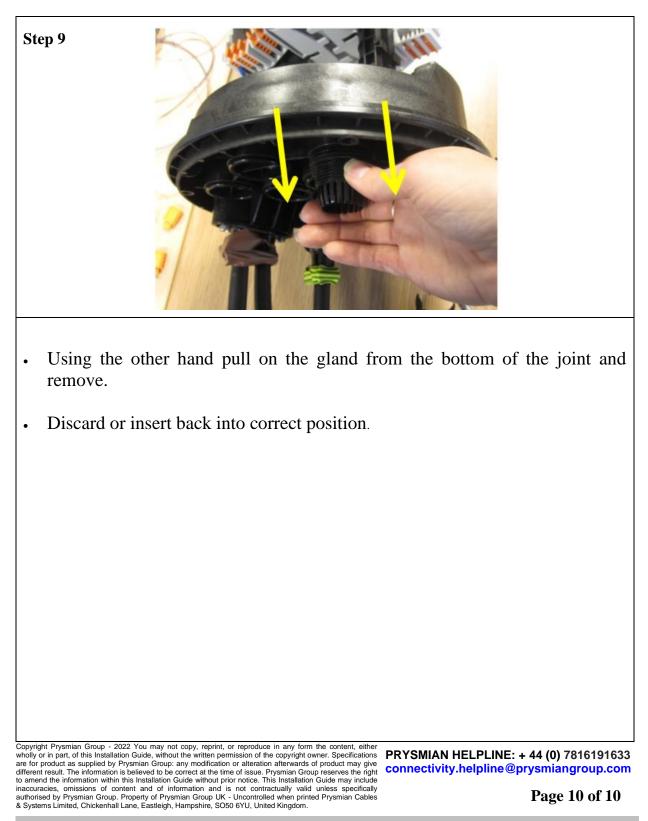

IP390

Issue Number: 03

Date: 22nd August 2022