

LMJ CLAMP REPLACEMENT INSTALLATION GUIDE

Description

How to replace the clamp and o-seal of the LMJ.

Tools Required

Tools:
Clean cloth/rag.

LMJ CLAMP REPLACEMENT INSTALLATION GUIDE


Step 1



- Remove LMJ from pit/pole.

LMJ CLAMP REPLACEMENT INSTALLATION GUIDE

Step 2

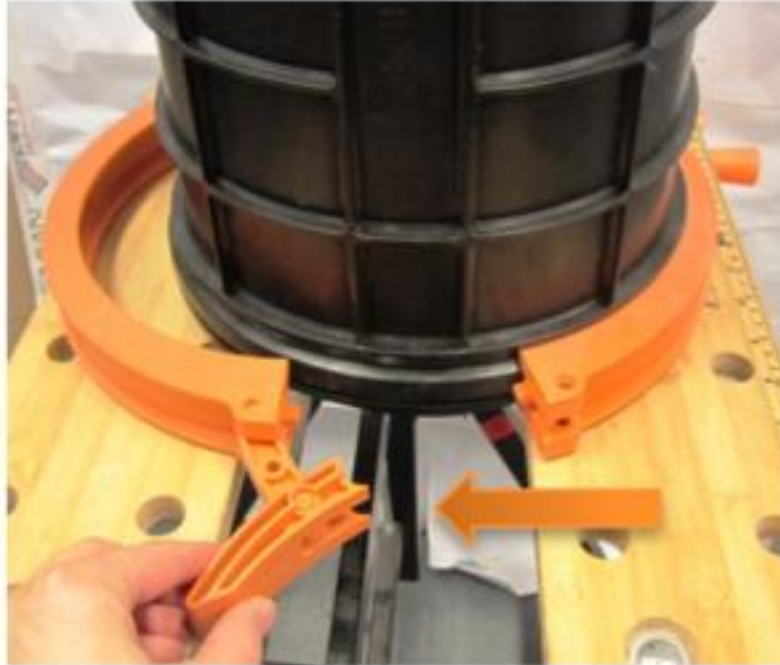

- Remove the clamp and discard.

LMJ CLAMP REPLACEMENT INSTALLATION GUIDE

Step 3



- Remove the o-seal and discard.

LMJ CLAMP REPLACEMENT INSTALLATION GUIDE

Step 4

BASE O-SEAL FACE



CAP O-SEAL FACE



- Thoroughly clean away dust, grime, grease and dirt from the o-seal faces on the base and cap.

LMJ CLAMP REPLACEMENT INSTALLATION GUIDE


Step 5



- Install a new o-seal.

LMJ CLAMP REPLACEMENT INSTALLATION GUIDE

Step 6

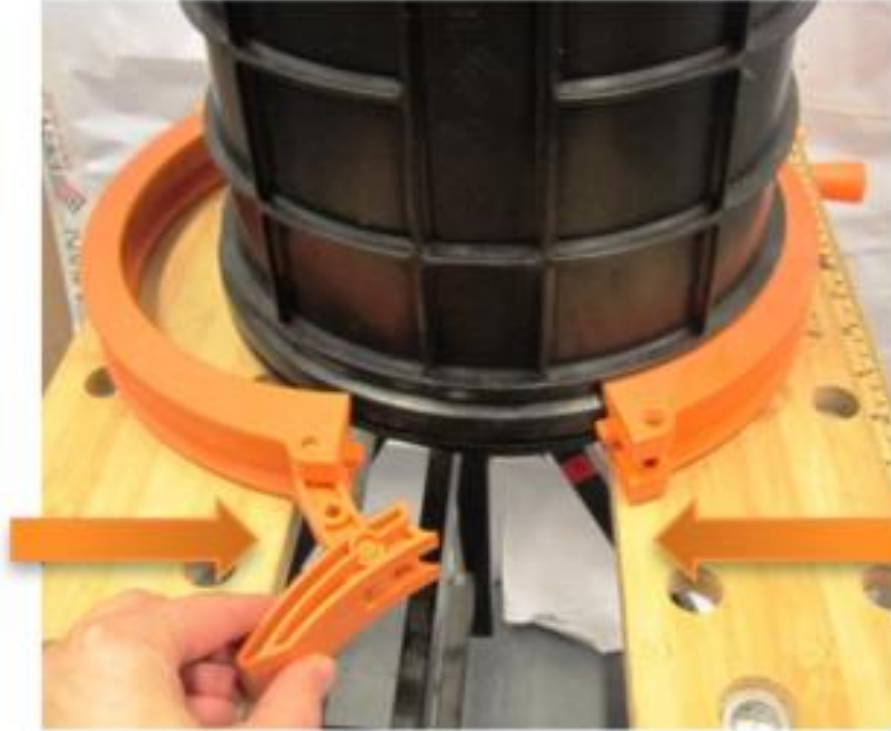

- Install a new clamp and replace LMJ into the pit/pole.