



OAsys® INTERNAL PLANT OCR Sub Rack

Component Parts (pictures not to scale)

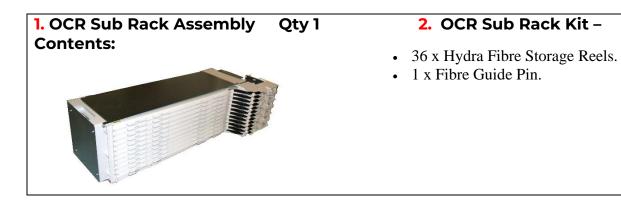


Page 1 of 7




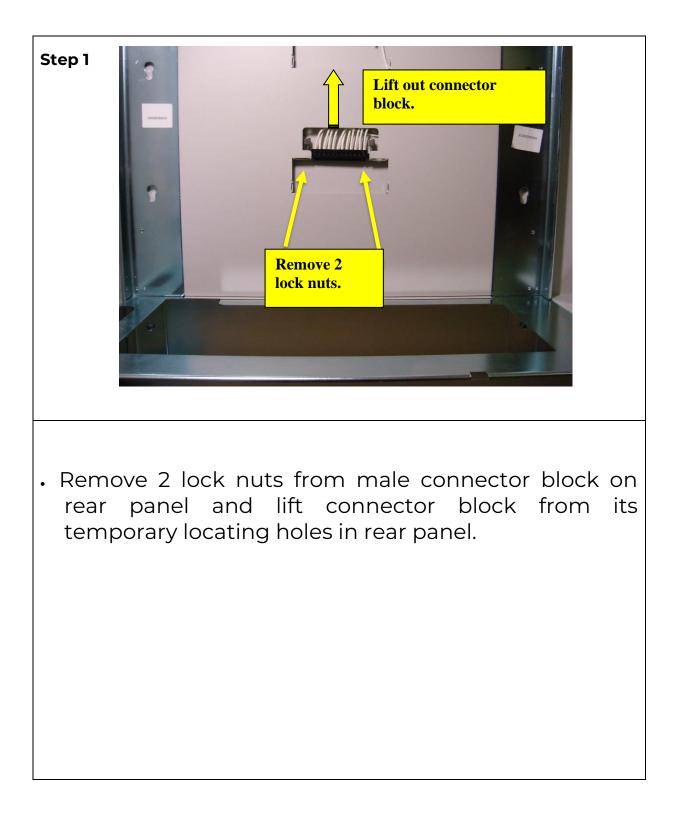




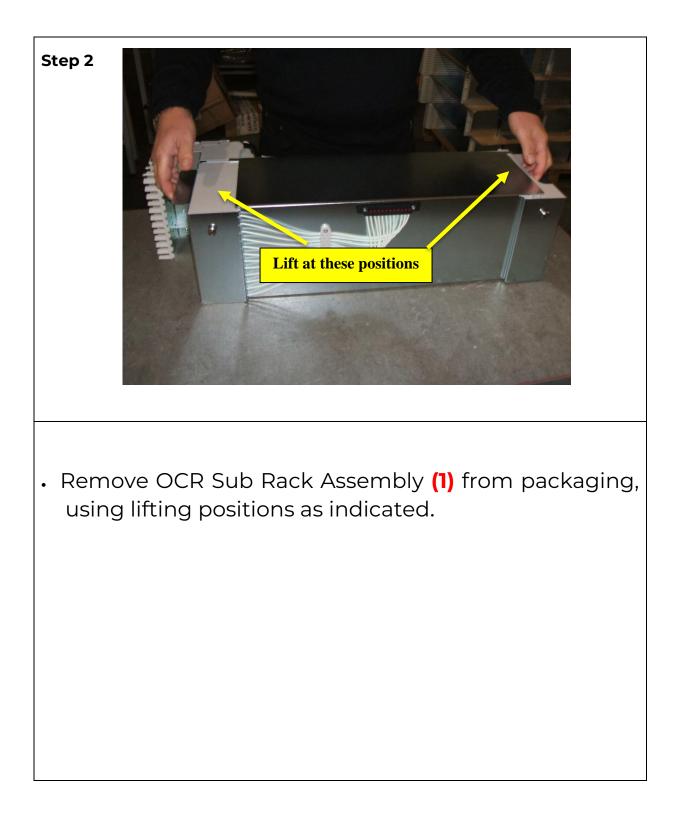




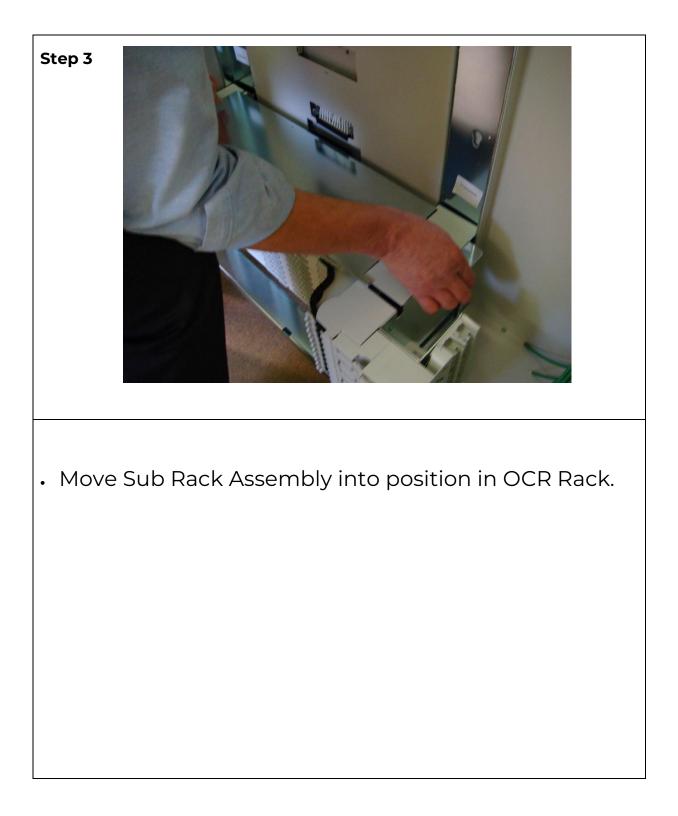



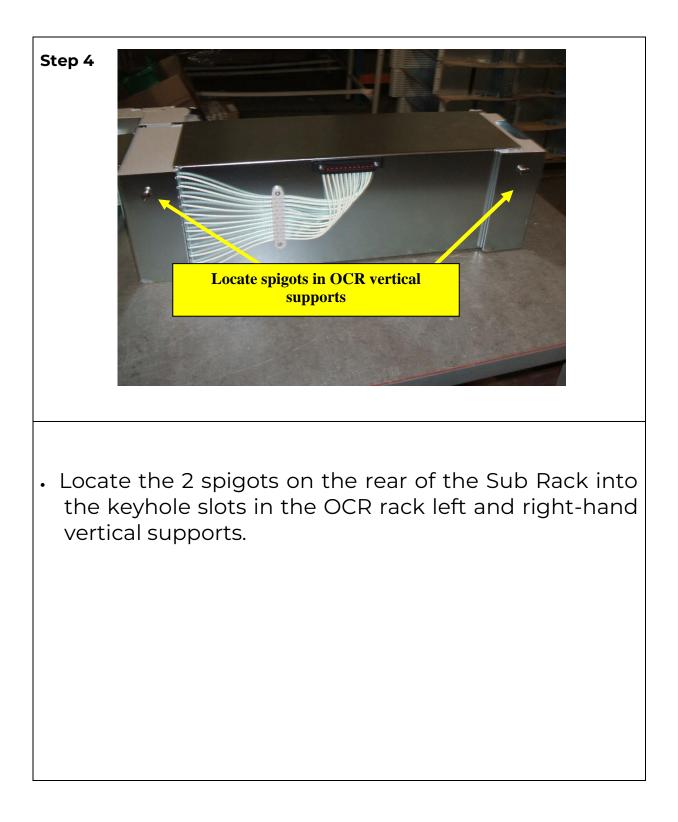




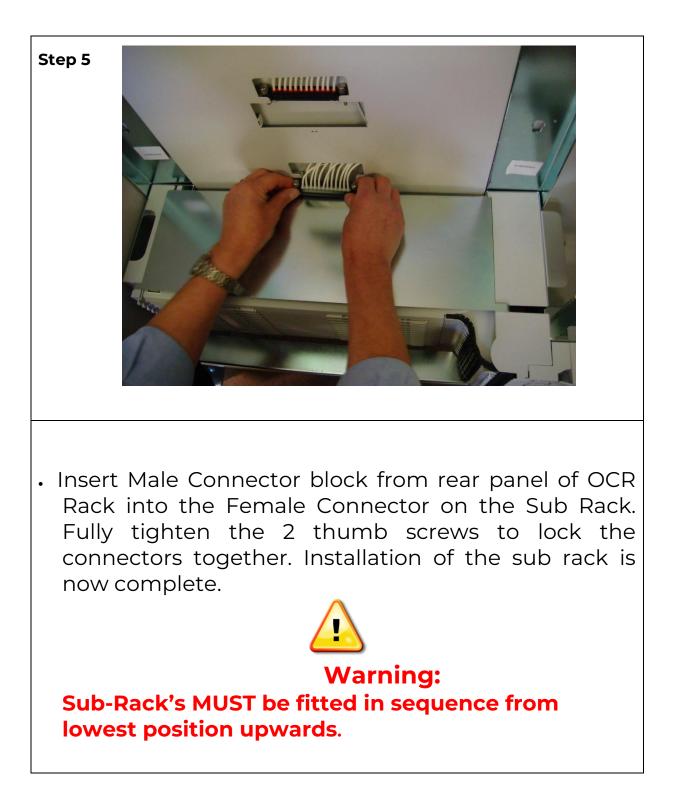

Page 6 of 7

prysmian INSTALLATION INSTRUCTION

MOUNTING THE SHELF TO THE RACK

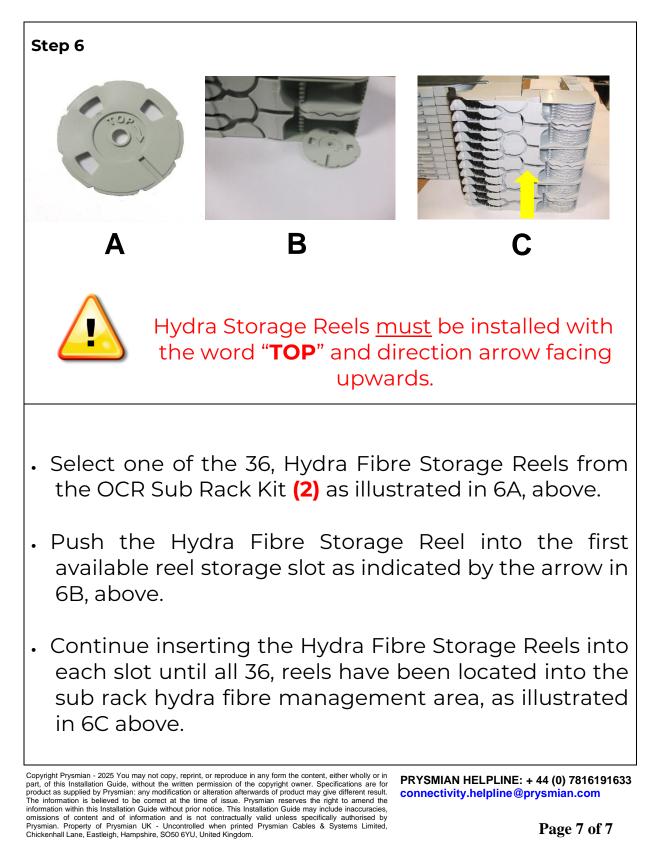

Page 7 of 7