

BEP 48 (BEP48 standalone box)

IP/Installation Procedure for BEP 48 (BEP48 standalone box)

This procedure will showcase two main products configurations.

- Equipped with Pigtails -BEP (48) PN XCPSC05262
- Equipped with preterminated cable.
 BEP (48) precon Flex Drop ADSS 30m PN XXXXXXX
 BEP (48) precon Flex Drop ADSS 40m PN XXXXXXXX
 BEP (48) precon Flex Drop ADSS 50m PN XXXXXXXX



Precautions and Warnings

- ! This guide is only valid for products purchased from or approved by Prysmian.
- ! During this procedure all local Health & Safety statutory regulations must be adhered to.
- ! This installation should only be carried out by suitably trained competent persons.

Page 2 of 31



Tools Required

| Key | T20 Tool | Drill | Marker | Level | Screwdriver |
|---------|----------|---------|---------|---------|-------------|
| PN: N/A | PN: N/A | PN: N/A | PN: N/A | PN: N/A | PN: N/A |
| | | | | - Q (d) | |

Packaging (inner carboard box per product + outer cardboard box for 10 products)

Optional Kits:

- extension box up 12fo PN XXXXXXX
- Extension box Storage PN XXXXXXX
- Oval port kit (1 bag of 1000 parts) PN XXXXXXX
- inline port kit (1 bag of 1000 parts) PN XXXXXXX
- Corrugated tube entry as kit (1 bag of 1000 parts) PN XXXXXXX

Page 3 of 31



Wall Mounting - BEP 48 (BEP48 standalone box) - w Pigtails

Step 1



Mark on the wall using a marker, the locations of the mounting positions.



Wall Mounting - BEP 48 (BEP48 standalone box) - w Pigtails

Step 2



Drill holes in the wall.



Wall Mounting - BEP 48 (BEP48 standalone box) - w Pigtails

Step 3



Mount the product using the screws & ensure the product is level.



Step 1



Open the box using the key.



Step 2



After opening the box, unscrew the tray cover.



Step 3



Unclick the circular gland.



Step 4



Feed your cable through the gland, anchor the aramid under the screw. Ensure that there is space under the metal and the screw is not fully tightened before trying to slot the aramid underneath it.



Step 5



Secure the two halves together.



Step 1



Install the gland back into the BEP.




Step 2



Route the fibre elements behind the tray, coil them going clockwise.



Step 3

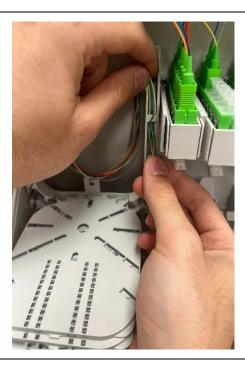

Route the fibres up onto the trays, make sure that the elements are stripped at the point shown.



Step 4



Splice the incoming cable to the existing pigtails, using your company's preferred method. Place the splice holder in the position as shown.



Step 5



Place the splice tray cover back on to the tray, wrap the velcro around and lock the splice area up.



Step 1



Push through the rubber grommet as shown.



Step 2



Unclick the plastic housing.



Step 3



Feed the drop cable through.



Step 4



Place the rubber grommet over the drop cable and place the plastic housing over the grommet. Click into place.



Step 5



Connect the drop cable into the patch panel and plug it in. It should look like this.



Step 6



Close the lid of the BEP and screw it shut ,using the key.



Wall Mounting - BEP 48 (BEP48 standalone box) - w Precon cable

Step 1



Mark on the wall using a marker, the locations of the mounting positions.



Wall Mounting - BEP 48 (BEP48 standalone box) - w Precon cable

Step 2



Drill holes in the wall.



Wall Mounting - BEP 48 (BEP48 standalone box) - w Precon cable

Step 3



Mount the product using the screws & ensure the product is level.



Step 1



Push through the rubber grommet as shown.



Step 2



Feed the drop cable through.



Step 3



Place the rubber grommet over the drop cable and place the plastic housing over the grommet. Click into place.



Step 4



Connect the drop cable into the patch panel and plug it in. It should look like this.



Step 5



Close the lid of the BEP and screw it shut, using the key.



Contact information

| | Office | Telephone Fax | email |
|-----------------|------------------|--|--|
| ASEAN | Singapore | T:+65 6898 3633 T:+65 6265 0707 | sales.asean@prysmiangroup.com |
| AUSTRALIA | Liverpool | T: 1300 300 304 F : 1300 300 307 | sales.telecom.au@prysmiangroup.com |
| CHINA | Wuxi | T:+86 510 68069518 F:+86 510 68069559 | tls.china@prysmiangroup.com |
| DANUBIAN | Slatina | T:+40-349-406.628 F:+40-349-433.484 | customercare.romania@prysmiangroup.com |
| FRANCE | Champs-Sur-Marne | T:+33169677280 | telecom.fr@prysmiangroup.com |
| ITALIA | Milano | T: +3964493939 F: +3964499264 | pqa@prysmiangroup.com |
| LATAM | Sorocaba | T: +55 15 3212 6801 F: +55 15 3212 6814 | sales.telecom.br@prysmiangroup.com |
| MIDDLE EAST | Dubai | T:+971 4 368 8682 F:+971 4 368 8683 | dubaioffice@prysmiancables-me.com |
| NORDICS | Malmö | T: +46 380 554 265 | info.nordic@prysmiangroup.com |
| NORTH AMERICA | Lexington | T:800 669 0808 | comm.cables@prysmiangroup.com |
| OPGW & SPECIALS | Vilanova | T: +34 93 811 6181 F: + 34 93 811 6031 | opgw@prysmiangroup.com |
| RUSSIA | Moscow | T: +7 495 777 80 86 F: +7 495 777 80 89 | info.ru@prysmiangroup.com |
| SPAIN & AFRICA | Maliaño | T: +34 942247118 F: +34 942247114 | santander.bo@prysmiangroup.com |
| TURKEY | Istanbul | | tpks@prysmiangroup.com |
| UK | Eastleigh | T: +44 2380 295 000 | sales.telecom.uk@prysmiangroup.com |

Copyright Prysmian - 2025 You may not copy, reprint, or reproduce in any form the content, either wholly or in part, of this Installation Guide, without the written permission of the copyright owner. Specifications are for product as supplied by Prysmian: any modification or alteration afterwards of product may give different result. The information is believed to be correct at the time of issue. Prysmian reserves the right to amend the information within this Installation Guide without prior notice. This Installation Guide may include inaccuracies, omissions of content and of information and is not contractually valid unless specifically authorised by Prysmian. Property of Prysmian UK - Uncontrolled when printed Prysmian Cables & Systems Limited, Chickenhall Lane, Eastleigh, Hampshire, SO50 6YU, United Kingdom.

PRYSMIAN HELPLINE: + 44 (0) 7816191633 connectivity.helpline@prysmian.com

Page 31 of 31