

UMJ/CMJ/MMJ – Flat Wall Mounting Bracket

Description

How to fit the flat wall mounting bracket to the wall and joint.

Tools Required

Tools:

Flat-head screwdriver
Drill [Not required for metallic pole mounting]
5mm drill bit
Electric screwdriver


This installation guide is suitable for kit XJTSC03020

KIT CONTENTS OF XJTSC03020

1x UMJ/CMJ/MMJ flat wall bracket
4x M8x60 Screw
4x M8 Wall plugs
1x Installation guide

For Wall Mounting UMJ/CMJ/MMJ

Step 1

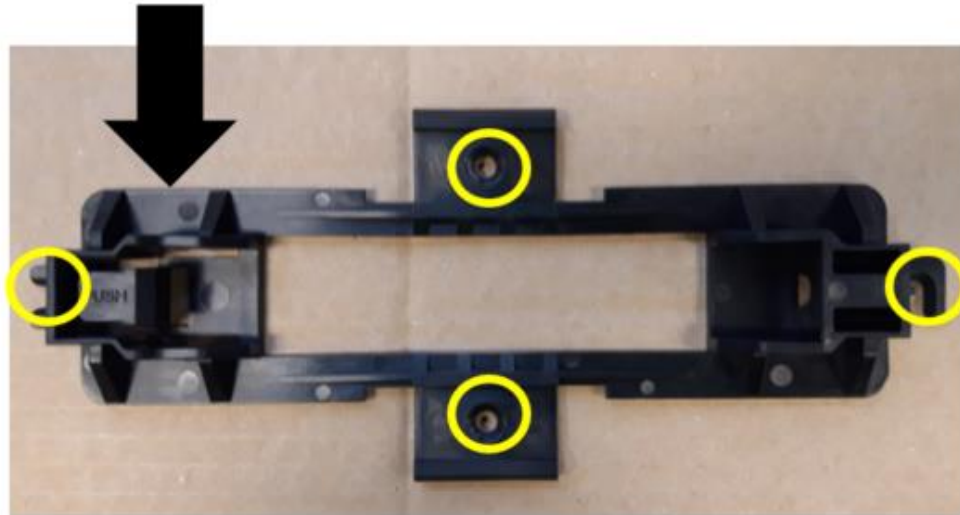


- Place the bracket against the wall in the final position as required and mark 4-hole positions as shown.

NOTE: Orientation of bracket must be as shown in image with the “push” clip on the left-hand side.

For Wall Mounting UMJ/CMJ/MMJ


Step 2

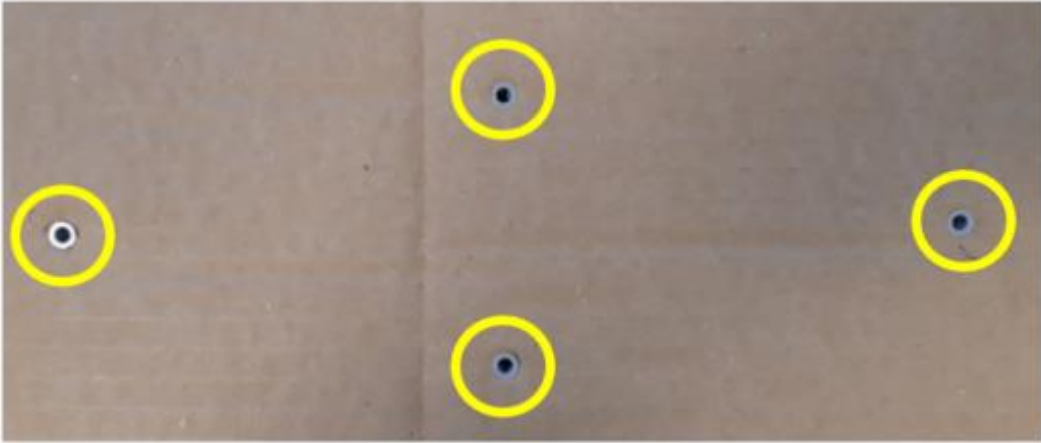

- Drill 4 holes as marked using the 5mm drill bit and fit wall plugs into the holes.

For Wall Mounting UMJ/CMJ/MMJ


Step 3

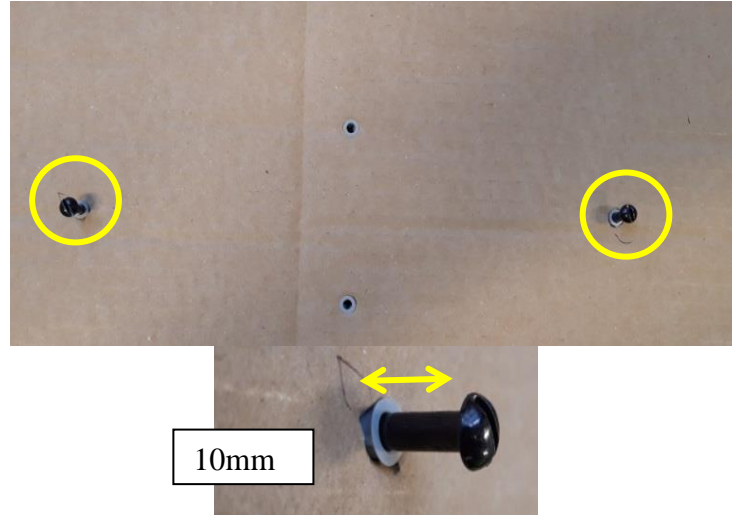

- Screw the 2 screws as shown into the wall plugs and leave the screw head approx. 10mm from the wall face.

For Wall Mounting UMJ/CMJ/MMJ


Step 4

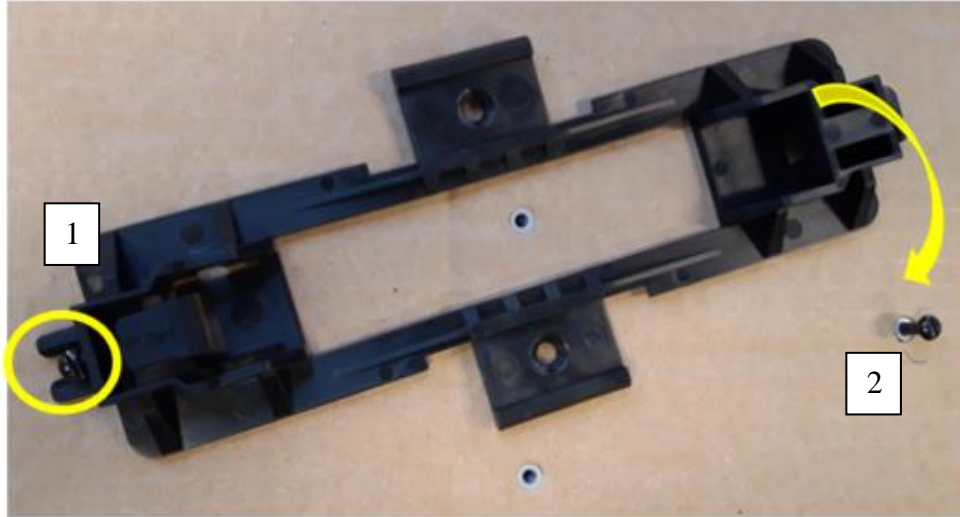

- Slide the horizontal groove into position first, then rotate the bracket about the screw to fit the vertical groove over the second screw.

For Wall Mounting UMJ/CMJ/MMJ

Step 5

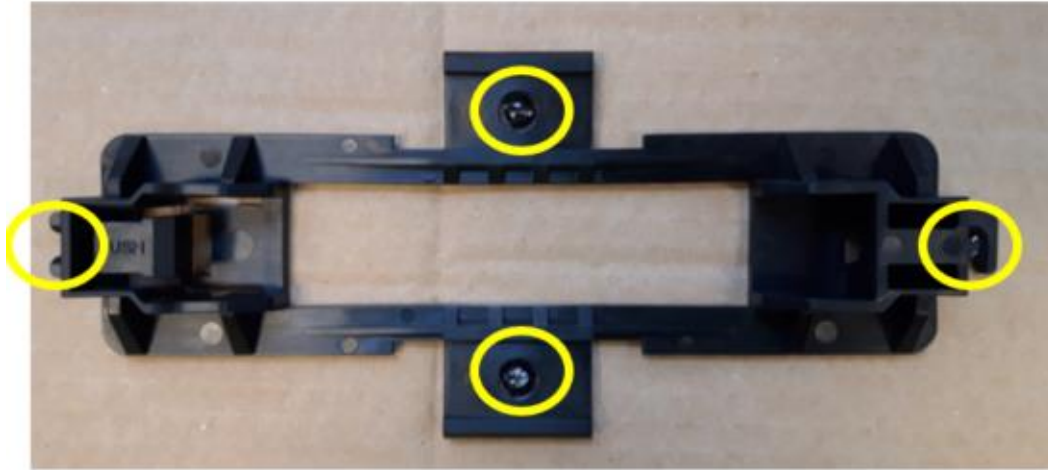


- Screw all 4 screws fully into position so the bracket is secured.

Prysmian
Group
INSTALLATION INSTRUCTION

For Pole Mounting UMJ/CMJ/MMJ with screws [Wooden pole only]

Step 1

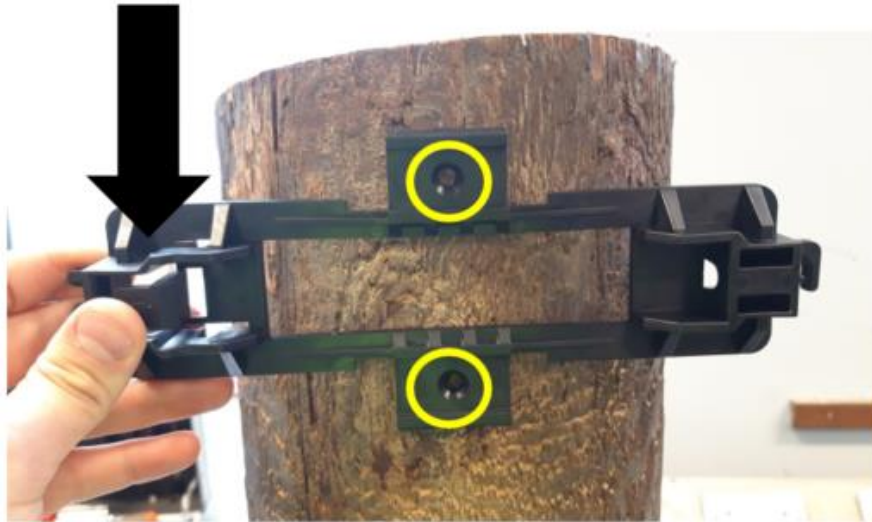


- Place the bracket against the pole in the final position as required and mark 2-hole positions as shown.

NOTE: Orientation of bracket must be as shown in image with the “push” clip on the left-hand side.

Prysmian
Group
INSTALLATION INSTRUCTION

For Pole Mounting UMJ/CMJ/MMJ with screws [Wooden pole only]


Step 2

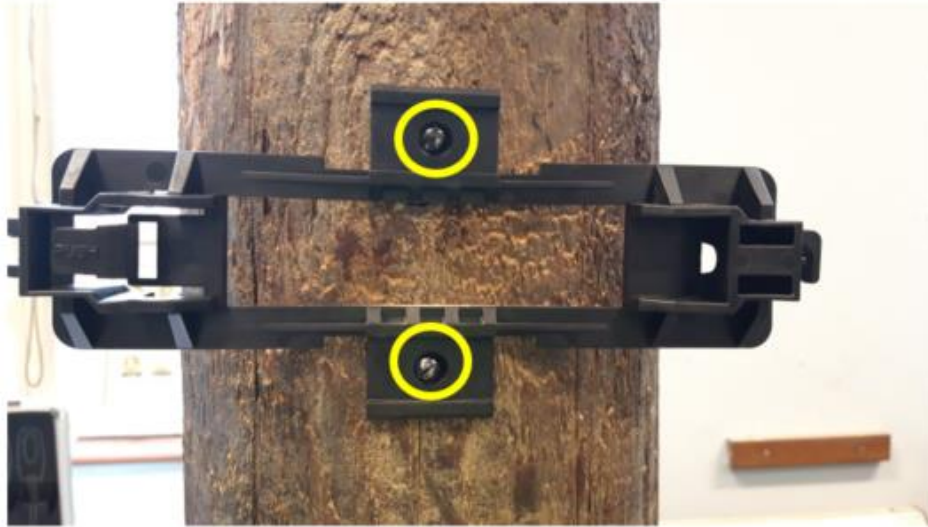

- Screw bracket to pole using screws provided.

Adding/removing the UMJ/CMJ/MMJ to/from the bracket

Step 1

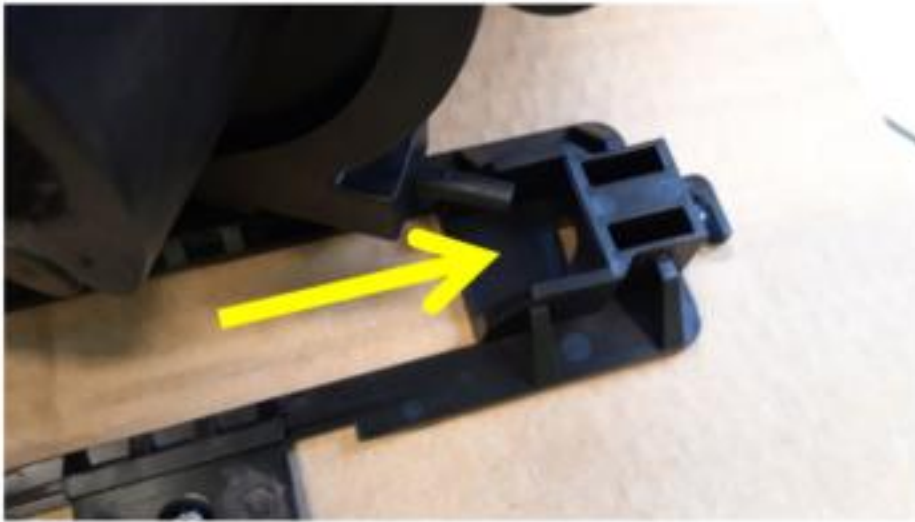

- With the bracket in position on the wall/pole, slide the pin on the right-hand side of the clamp into the hole in the bracket and push the other end into position behind the clip face.

Adding/removing the UMJ/CMJ/MMJ to/from the bracket

Step 2




NOTE: Clamp on joint should be removed and rotated if installed upside down.

- Joint is upside in image.

Adding/removing the UMJ/CMJ/MMJ to/from the bracket

Step 3

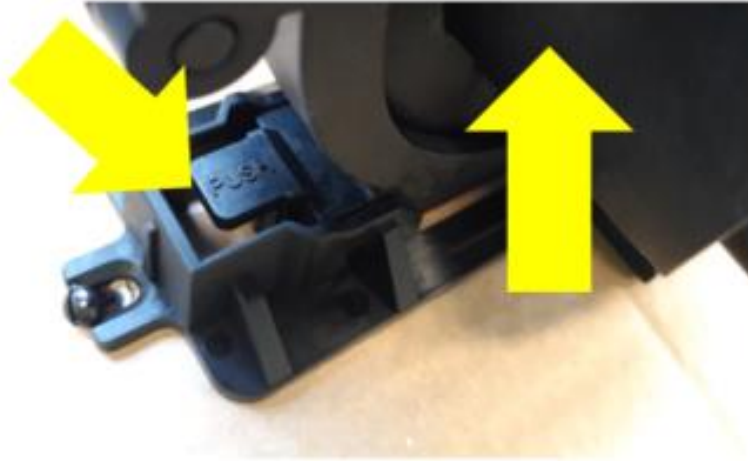

- To remove the joint, press the “push” on the bracket and pull the joint away from bracket.