

**Prysmian**  
Group  
**INSTALLATION INSTRUCTION**

## CMJ/MMJ RIBBON ANCHOR BRACKET

### Description

The CMJ/MMJ Ribbon Anchor Bracket is used to help bring ribbon cable in through oval ports, whilst keeping the fibres in place.

### Tools Required

**Tools:**  
Phillips Screwdriver, scissors.

**PRYSMIAN HELPLINE: + 44 (0) 7816191633 [connectivity.helpline@prysmiangroup.com](mailto:connectivity.helpline@prysmiangroup.com)**

Copyright Prysmian Group - 2022 You may not copy, reprint, or reproduce in any form the content, either wholly or in part, of this Installation Guide, without the written permission of the copyright owner. Specifications are for product as supplied by Prysmian Group: any modification or alteration afterwards of product may give different result. The information is believed to be correct at the time of issue. Prysmian Group reserves the right to amend the information within this Installation Guide without prior notice. This Installation Guide may include inaccuracies, omissions of content and of information and is not contractually valid unless specifically authorised by Prysmian Group. Property of Prysmian Group UK - Uncontrolled when printed Prysmian Cables & Systems Limited, Chickenhall Lane, Eastleigh, Hampshire, SO50 6YU, United Kingdom.

### Component Parts (pictures not to scale)

**1 CMJ/MMJ ANCHOR BRACKET**  
- XJTSG03446 **Qty 1**



**2 CABLE TIE-100MM X 2.5MM**  
- XXXBP00009 **Qty 4**



**3 M4 X 8 POZI PAN HD BZP** -  
XXXBP00029 **Qty 2**



**4 Cable Anchor Plate**  
-XJTSG00035 **Qty 1**



## CMJ/MMJ RIBBON ANCHOR BRACKET INSTALLATION


### Step 1



- Begin by removing the grub screws from the Cable anchor bracket.

## CMJ/MMJ RIBBON ANCHOR BRACKET INSTALLATION

### Step 2

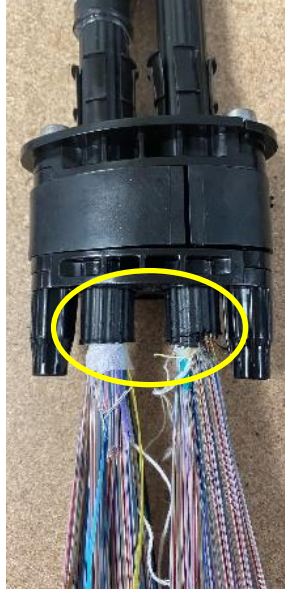

- Ensure that there is 25mm of the cable but for the ribbon anchor bracket to attach to.

## CMJ/MMJ RIBBON ANCHOR BRACKET INSTALLATION

### Step 3



- Place the ribbon anchor bracket onto the butts of the cable.

## CMJ/MMJ RIBBON ANCHOR BRACKET INSTALLATION

### Step 4



- Place the cable tie around the back of the cable and through the anchor plate and tighten.

## CMJ/MMJ RIBBON ANCHOR BRACKET INSTALLATION

### Step 5



- Repeat step 4 until the ribbon anchor bracket is fully populated with cable ties.

## CMJ/MMJ RIBBON ANCHOR BRACKET INSTALLATION

### Step 6



- Ensure that the cable ties are tight as possible then cut off the ends.

## CMJ/MMJ RIBBON ANCHOR BRACKET INSTALLATION

### Step 7




- Place the ribbon cable through the oval port and align the fibres through the allocated slot.



## CMJ/MMJ RIBBON ANCHOR BRACKET INSTALLATION

### Step 8

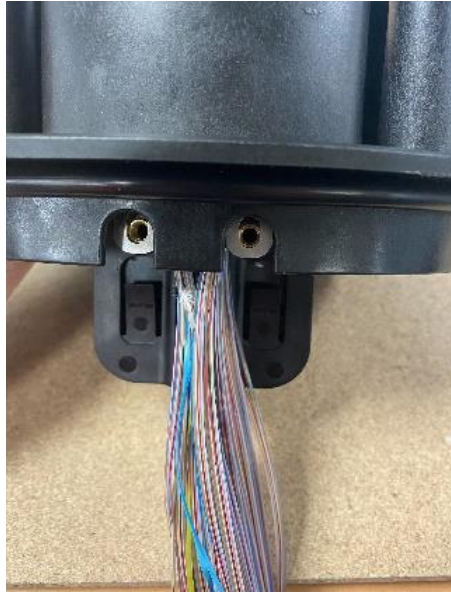

- Slot the ribbon anchor bracket into place, lining up the holes.

## CMJ/MMJ RIBBON ANCHOR BRACKET INSTALLATION


### Step 9



- Insert the aramid around the screw, then screw into place.

## CMJ/MMJ RIBBON ANCHOR BRACKET INSTALLATION

### Step 10

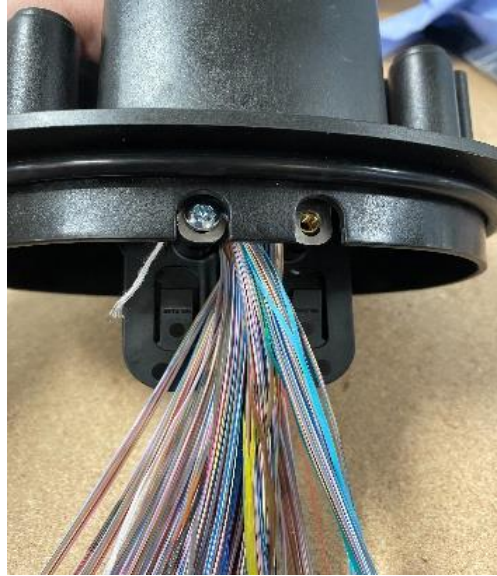

- Fully tighten as shown.

## CMJ/MMJ RIBBON ANCHOR BRACKET INSTALLATION

### Step 11



- Repeat the process for on the other side, by attaching that cables aramid around the screw.

## CMJ/MMJ RIBBON ANCHOR BRACKET INSTALLATION

### Step 12



- When finished it should look as shown.