

INSTALLATION INSTRUCTION

OAsys® INTERNAL PLANT
Riser Box TDU - Installation
Part Number: XCPSC00178

Description


Allows the interception of 1 Blown Fibre cable (MAX 24 Tube)
Wall mounted
 Cable distribution from the left- or right-hand side of the box (up to 7 tube cable)
 Lockable design

 SPACE ENVELOPE: (W 250mm x D 82mm x H 325mm)

Tools & Additional Items Required

Additional Items:	Prysmian Part No.
5 to 5 blown tube connectors	XBFSC00075
 Tools:	 Prysmian Part No.
Flush Cutting Tool 1A	XPFSC00150
Pozidrive Screwdriver No.2	N/A

Component Parts (pictures not to scale)

1 Riser Box Assembly	Qty 1	2 Cable tie 236 x 3.6mm	Qty 8
		3 Wall Fixing Screws	Qty 4
		4 Wall Fixing Wall Plugs	Qty 4
		5 Installation Instructions	Qty 1

Cable Installation

Step 1 – Wall Mounting


Drill in four
positions shown



- Identify a suitable position to mount the Riser box **(1)**, check the position to ensure no concealed services are present prior to drilling the mounting holes.
- Using a 6mm drill bit carefully drill four holes on positions marked approximately 40mm deep.

Cable Installation


Step 2

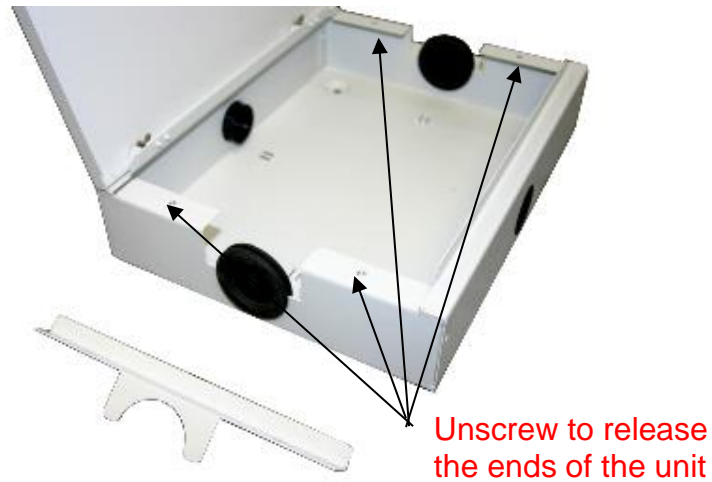

- Using a screwdriver, unscrew the four screws (two at either end) to release the two-cable entry ends as shown above in preparation for installing the cable.

Cable Installation


Step 3

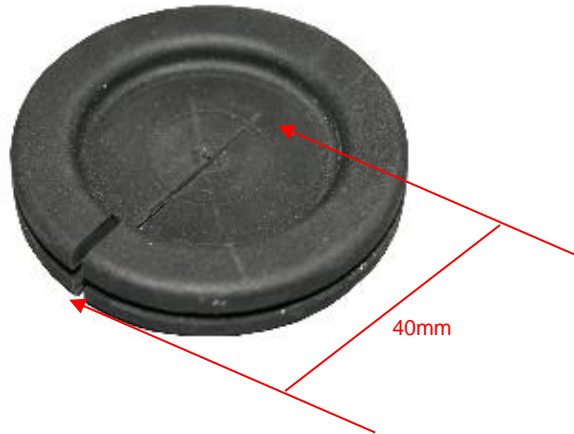

- Using a sharp a sharp knife or a pair of scissors cut a slot in the cable entry bung approximately 40mm long as shown above for inserting the cable.

Cable Installation


Step 3

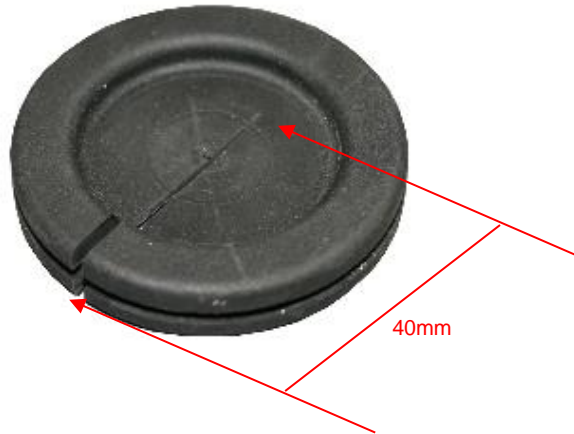

- Using a sharp a sharp knife or a pair of scissors cut a slot in the cable entry bung approximately 40mm long as shown above for inserting the cable.

Cable Installation


Step 4

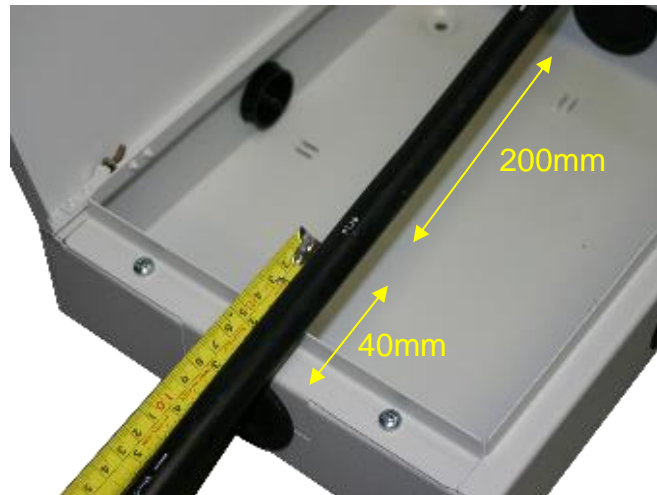

- Align the cable to be intersected on top of the riser box as shown above, measure the cable approximately 40mm from the inside wall of the box and apply a butt mark in preparation for stripping.
- Apply a second butt mark approximately 200mm from the first mark.

Cable Installation

Step 5

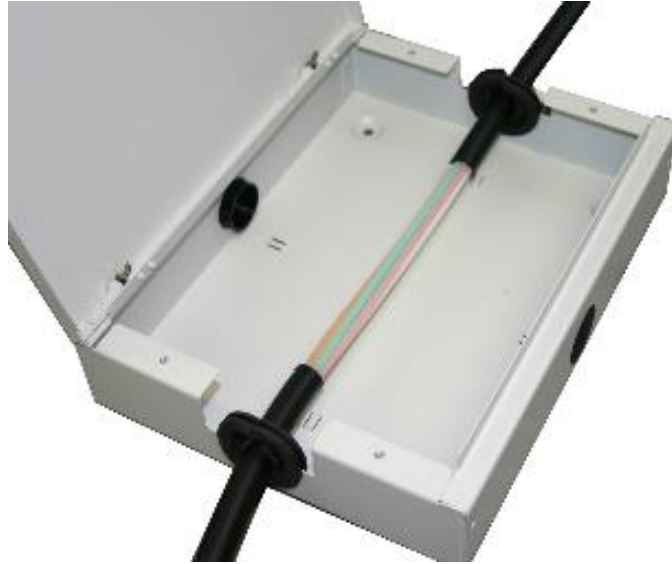

- Carefully strip the sheath to expose the internal tubes as shown above.
- Insert the cable into the bung ensuring the slot made in step 3 is facing the top of the unit.
- Manipulate the bung to cover as much of the cable as possible to ensure a good seal on the outer sheath of the cable.

Cable Installation


Step 6



- Carefully strip the sheath to expose the internal tubes as shown above.
- Insert the cable into the bung ensuring the slot made in step 3 is facing the top of the unit.
- Manipulate the bung to cover as much of the cable as possible to ensure a good seal on the outer sheath of the cable.

Cable Installation


Step 7

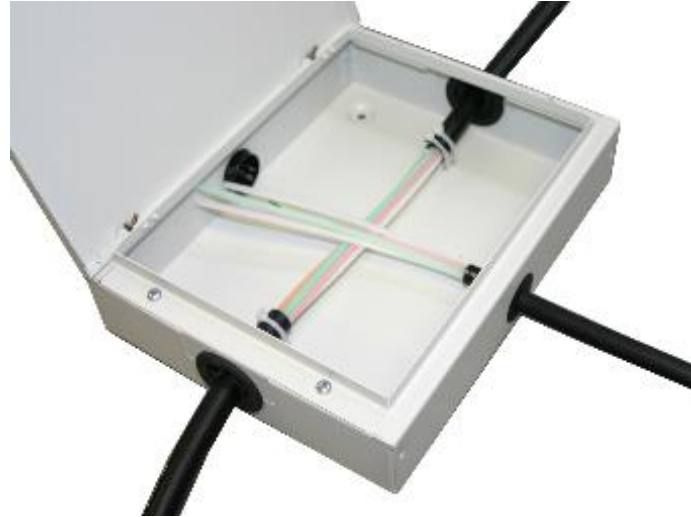

- Cut a small slot approximately 5mm in length in the side cable entry bung and push the cable into the unit as shown above. Strip approximately 200mm of the outer sheath off the intersecting cable to expose the tube(s) in preparation for termination.
- Using two cable ties strap the cable in position ensuring the straps are located on the outer sheath of the cable.
- Select the tube to be intersected from the through cable and cut approximately 20mm from the butt of the cable.

Cable Installation

Step 8

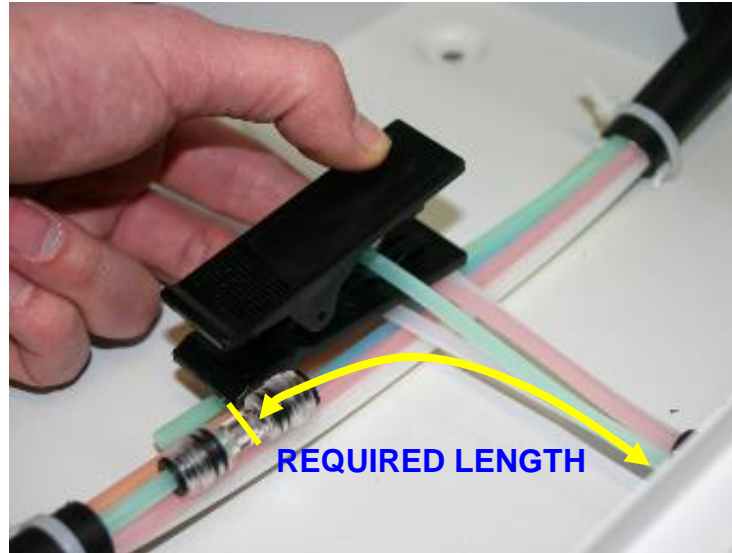


- Using a 5mm tube connector, push the connector on to the tube ensuring it is fully located on the end of the tube and the end of the tube is visible at the centre of the connector.
- Visually measure the mating tube so that adequate length has been left to plug into the connector and cut the tube.
- Plug the tube into the connector

NOTE: ENSURE NO MINIMUM BEND RADIUS HAS BEEN COMPROMISED!

Prysmian
Group
INSTALLATION INSTRUCTION

Cable Installation

Step 9

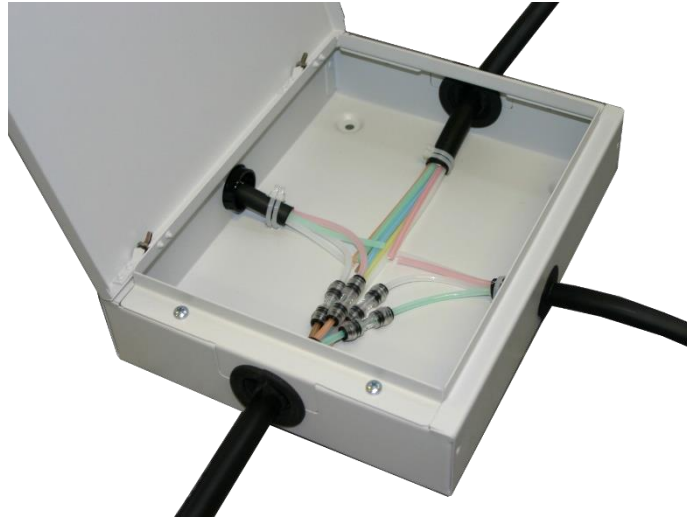

- Repeat step 6 to 8 for any subsequent cables to be installed.
- Close the cover and lock the unit

Copyright Prysmian Group - 2022 You may not copy, reprint, or reproduce in any form the content, either wholly or in part, of this Installation Guide, without the written permission of the copyright owner. Specifications are for product as supplied by Prysmian Group: any modification or alteration afterwards of product may give different result. The information is believed to be correct at the time of issue. Prysmian Group reserves the right to amend the information within this Installation Guide without prior notice. This Installation Guide may include inaccuracies, omissions of content and of information and is not contractually valid unless specifically authorised by Prysmian Group. Property of Prysmian Group UK - Uncontrolled when printed Prysmian Cables & Systems Limited, Chickenhall Lane, Eastleigh, Hampshire, SO50 6YU, United Kingdom.

PRYSMIAN HELPLINE: + 44 (0) 78161916333
connectivity.help@prysmiangroup.com

Page 11 of 11