


**BEM CABLE ANCHOR PLATE  
PART NUMBER: XEXSC00960/1**

**CABLE INSTALLATION**

**Step 1**

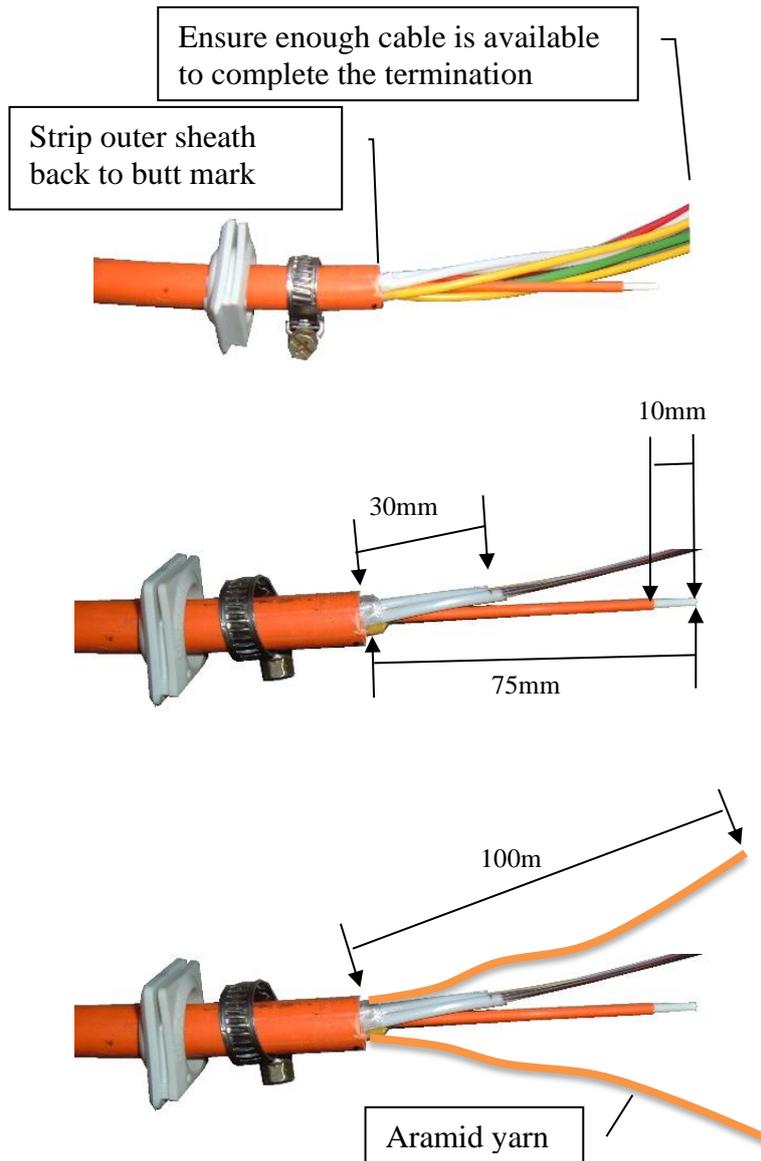


**CABLE INSTALATTION**

**Step 1**

- Measure and mark the required length of cable from the cable anchor position allowing length for terminating / splicing.
- Cut the Cable grommet provided (5) to the required diameter to fit the cable and feed onto the cable past the butt mark.
- Assemble the Jubilee clip onto the cable past the cable butt mark as show above.
- Strip the outer sheath of the cable and remove all tapes and bindings.
- Remove all ‘filler’ elements from the cable.
- Cut the strength member to 75mm from the cable butt and expose the final 10mm of outer sheath.
- (If present) cut the Aramid yarns 100mm from the cable butt.
- Remove the cable element sheaths to 30mm from the cable butt to expose the fibres as shown above.

**CABLE INSTALATTION**

**Step 2**

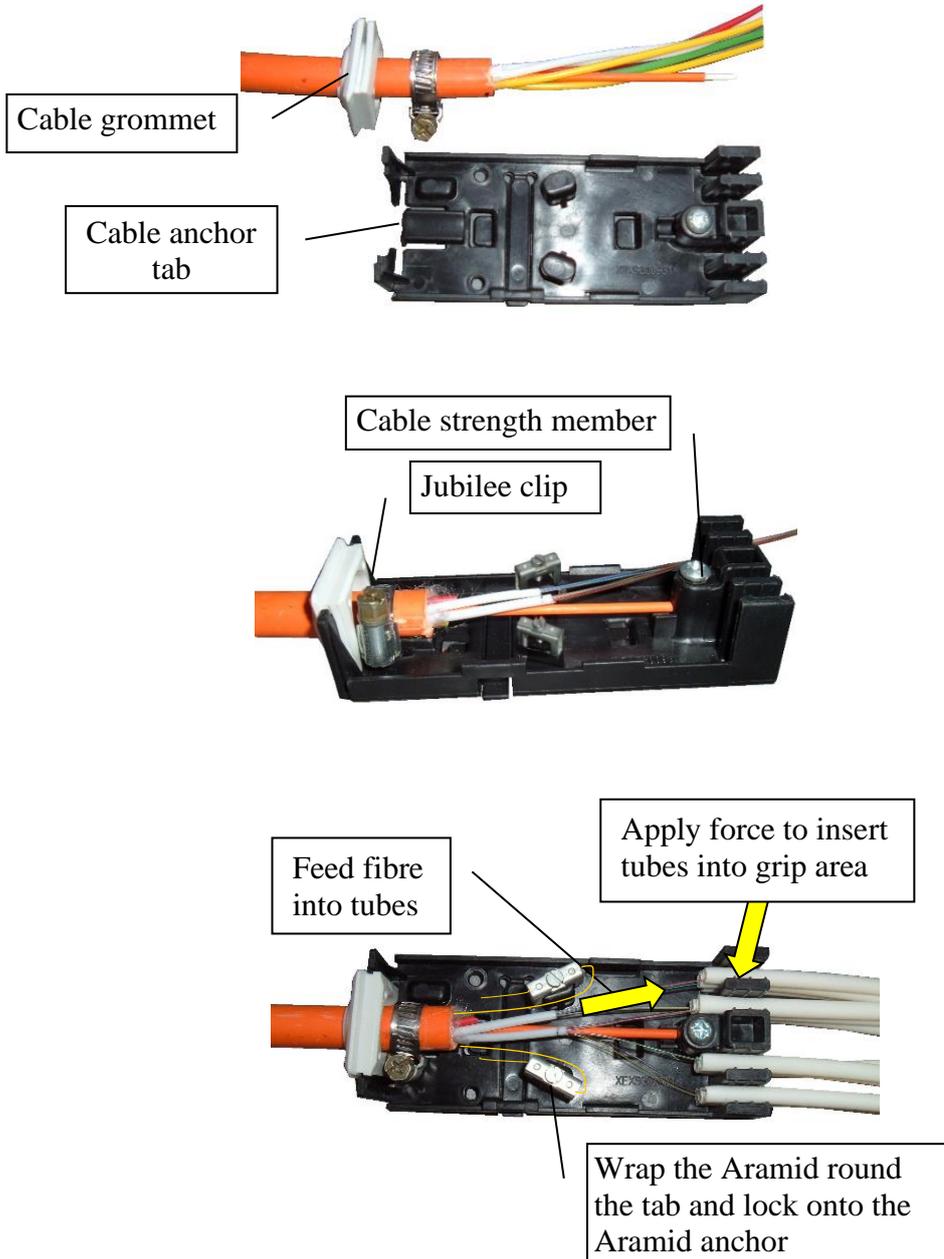


**CABLE INSTALATTION**

**Step 2**

- Slide the jubilee clip over the cable anchor tab whilst at the same time fitting the cable grommet into position and locating the cable strength member as shown above.
- Tighten the strength member screw and the jubilee clip to anchor the cable into position.
- (If present) thread the strands of Aramid into the Aramid retention clamps and tighten the screws on top as shown above.
- Measure the required length of transportation tube and cut to length.
- Push the tube into the tube retention grips applying a small force and repeat for all tubes required.
- Separate the fibres into their require bundles and feed into the transportation tube until they appear at the other end of the tube, pull through any excess length being careful not to over bend the fibres.

**CABLE INSTALATTION**

**Step 3**

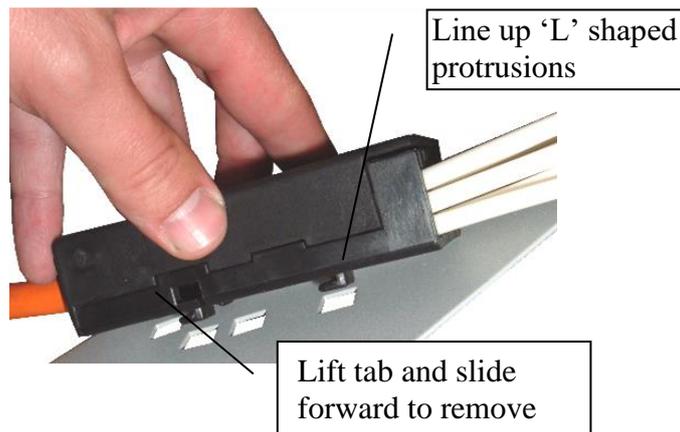

**CABLE INSTALATTION**

**Step 3**

- Assemble the cover by aligning the front surfaces and pushing the assembly firmly together.
- To mount the unit to the mating component, firstly locate the two 'L' shaped protrusions onto the metal work and apply a force backwards to fully locate, as shown above.
- To remove the unit, lift the tab located on the right-hand side and push forward.
- To remove the cover from the base, squeeze the side of the cover as indicated above and lift away from the base.